

**MODEL #CC-1214S SCREEN HOUSE**  
**14ft x 12ft x 90in/4.26m x 3.65m x 2.28m**

(✓) QTY	DESCRIPTION	PART NUMBER
<b>FABRIC BODY:</b>		
1	Tent Body	N/A
<b>POLES:</b>		
8	Steel, Main Tent Pole-Black, 3 section	DS1214-SP-3BK
2	Fiberglass, shock-corded Main Tent Pole – black, 5 section	DS1214-FP-5BK
2	Fiberglass, shock-corded Main Tent Pole(Yellow Labeled) – black, 6 section	DS1214-FP-6YE
<b>CARRY BAG:</b>		
1	Carry Bag – black	DS1214-CB
<b>UNIVERSAL PARTS:</b>		
1	Pole Bag	DS1214-PB
1	Stake Bag	DS1214-SB
<b>STAKES:</b>		
16	Stakes: dia4mm x 7in	DS1214-ST

Review your parts list above to make sure all parts listed above have been included in your package.

**Please do NOT return product to store.**

**Call our TOLL FREE Numbers: 866-283-4412 Monday-Friday 7am - 5pm CST**

**Mention your complete Model Number so that our Representative may assist you!**

# NOTICE!

FOR MISSING PARTS:

1-866-283-4412

**PLEASE DO NOT  
 RETURN THIS UNIT TO  
 THE RETAIL STORE**

## TROUBLESHOOTING GUIDE

PROBLEM	SOLUTION
<b>1. CONDENSATION</b>	THIS IS CAUSED BY LOWER TEMPERATURES ON OUTSIDE OF PRODUCT COMBINED WITH BODY HEAT ON INSIDE OF PRODUCT. WHEN THIS OCCURS, AVOID TOUCHING WALLS TO REDUCE CONTACT LEAKAGE, LEAVING DOORS AND WINDOWS OPEN WILL REDUCE CONDENSATION.
<b>4. MILDEW</b>	TO AVOID MILDEW, NEVER STORE YOUR PRODUCT WET OR DAMP. HOWEVER, IF MILDEW OCCURS, USE A SOFT BRISTLE BRUSH OR SPONGE WITH MILD SOAP TO CLEAN. LET DRY IN THE SUNLIGHT AND APPLY SEAM SEALER COMPOUND ON INSIDE SEAMS.
<b>3. REPAIRING A TEAR</b>	FOR SMALL TEARS USE A SELF-ADHESIVE PATCH KIT. WE RECOMMEND A REPAIR SHOP FOR LARGER TEARS.
<b>4. FAULTY ZIPPER</b>	ALL OF OUR TENTS COME WITH SELF-REPAIRING NYLON COIL ZIPPERS. IF THE ZIPPER SEPARATES, YOU CAN MOVE THE SLIDER TO THE BEGINNING OF THE ZIPPER TAPE AND REWORK THE ZIPPER. LOCAL AWNING AND UPHOLSTERY REPAIR SHOPS MAY BE ABLE TO ASSIST YOU.
<b>5. FLOOR CONDENSATION</b> <small>(ONLY APPLICABLE ON PRODUCTS WITH FLOOR)</small>	TO PREVENT FLOOR CONDENSATION USE A GROUND CLOTH. PLACING A GROUND CLOTH UNDER YOUR PRODUCT WILL PROLONG ITS LIFE. GROUND CLOTH SIZE SHOULD BE SLIGHTLY SMALLER THAN PRODUCT FLOOR SIZE.

### ⚠ WARNING

THIS RECREATIONAL ITEM IS NOT INTENDED FOR USE AS A PERMANENT STRUCTURE. This Tent/Shelter has been developed and is intended to provide protection from sun and light rain. DO NOT use any gas or flame sources under or near this product. This product is NOT WATERPROOF.

Excess water build-up can cause the frame system to become unstable, and collapse, causing injury. Any personal accessories or modifications to product should be removed before the onset of inclement weather such as heavy rain, wind, lightning, hail, snow, etc. This product should be completely dismantled to avoid permanent damage to product components and avoid any possibility of personal injury. This product is not a toy. This product is not designed for use by children without adult supervision. Under no circumstances should this product be used as a permanent or temporary storage facility for children's toys, garden tools, personal belongings or similar valuables.



**SCREEN HOUSE**  
**CC-1214S**



## INTRODUCTION

A MESSAGE TO OUR CUSTOMERS:

WE ADVISE YOU TO ASSEMBLE THIS PRODUCT AT LEAST ONCE AT HOME BEFORE GOING ON A TRIP. Obtaining a familiarity with the assembly and disassembly processes will help ensure your satisfaction and ease concerns you may have should you find yourself setting up in the dark or adverse weather conditions.

GET THE MOST ENJOYMENT FROM YOUR PRODUCT BY READING THIS OWNER'S MANUAL THOROUGHLY; THEN FOLLOW OUR CAMPING SUGGESTIONS OUTLINED BELOW. NOTE THE SYMBOLS WE USE AND WHY:

 CALLS YOUR ATTENTION TO ANY POSSIBLE HAZARDS IN THE USE AND HANDLING OF YOUR PRODUCT.

 CALLS YOUR ATTENTION TO PROVEN SUGGESTIONS COLLECTED FROM OUR CAMPING EXPERTISE AND WILL ENHANCE YOUR EXPERIENCE!

**IMPORTANT NOTICE:** You may compromise the original FIRE RETARDENCY and WATER REPELLENCY protective coatings when you apply sprays or other chemical treatments to your tent.



**DO NOT SPRAY!**



**FABRIC**

### THIS FABRIC IS NOT WATERPROOF!

Your product's fabric is a synthetic material that has been treated and is not only highly-resistant to the sun's Ultraviolet (UV) light but also highly water-repellant in light rain conditions. Insure a successful and enjoyable camping experience by heeding the following tips:

- Keep objects from touching the inside, as objects will "draw in" moisture at the point of contact.
- "Prep" your product where necessary with a recommended seam sealing compound – refer to the seam sealing information in DO NOT SPRAY section of this owner's manual.

**Important:** Prolonged exposure to sunlight that causes UV damage and/or the use of non-recommended foreign substances on synthetic material may damage the fabric properties and IS NOT COVERED BY THE LIMITED WARRANTY.



**FIRE**

**WARNING:** KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS PRODUCT FABRIC. THIS FABRIC IS NOT FIREPROOF! It is made with flame-resistant fabric, which meets CPFI-84 specifications. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.

DO NOT ERECT NEAR an open flame. NEVER use any fuel burning, oxygen consuming devices, or any device that produces fumes – including, but not limited to: cooking stoves, lanterns, candles, hibachis, or heaters – in or around your product. Inhalation of fumes may result in carbon monoxide poisoning, injury and/or death.



**CARE & STORAGE**

Your product is NOT machine washable. Your product is NOT machine dryable.

One of the easiest ways to damage your product is storing it while wet. If you must close camp in the rain, follow these guidelines carefully:

- As Soon As Possible: Open your product and ensure that every area of fabric is clean and completely dry before rolling up for storage.
- If necessary, hang product outside or loosely drape over a ladder in your garage or spare room for a few days, turning it inside and out to prevent trapping pockets of water or debris.
- Use a soft brush to wipe away surface dirt.

To clean your product: Hand wash using a mild dishwashing soap and soft bristle brush, then allow the fabric to completely air dry.

Don't neglect the frame: Wipe down all parts – steel, plastic, and fiberglass – before putting away for next season's use. Salts from ocean air can and do affect damage if not dealt with as quickly as possible.

Storing a wet fabric for as little as 24 hours in warm weather is likely to cause fabric to mildew. Once mildew sets in, the stains are permanent. Stains cannot be removed without potential harm to the fabric's coatings; chemicals or cleaning agents used to remove dirt and stains may irreversibly harm the fabric.

Salts, mildew and other causes and subsequent effects are NOT covered under the limited warranty.

## ASSEMBLY INSTRUCTIONS

### THIS RECREATIONAL PRODUCT REQUIRES ADULT SUPERVISION FOR ASSEMBLY.

- Make sure ground surface is free from debris, i.e., rocks that could damage flooring.
- Unless otherwise specified all instructions will be given assuming the assembler is facing the front opening of the tent.
- Carefully fold out your poles, using caution to prevent snagging the shock-cording. Make sure each pole segment is "seated" into the next section before flexing the pole during set-up. Sort POLES by type and length; refer to parts list descriptions.
- Do not drop tent pole bag. Do not bounce tent bag on its end to remove tent, as these actions may damage the shock-corded and/or pole ends.

### STEP 1: Verify Package Contents

Verify package contents by emptying contents of bag(s) and confirming all parts are included and undamaged.  **Tip: Do this at home before you leave on your trip.**

### STEP 2: Fasten to the Ground

Select a smooth level site and spread out your screen house. Stake down the front base of the screen house by inserting a stake through the stake loops located on either side of the door. Drive the stakes into the ground at a 45-degree angle using a hammer or mallet. Make sure the front of the screen house is pulled out evenly and tightly.  **Tips: Stakes provided are for solid ground. Camping in sand? Use corkscrew style. Check favorite retailer for availability.**



### STEP 3: Assemble the Poles

Assemble fiberglass screen house poles by inserting sections into metal joints. Assemble the chain-corded steel poles, section by section, by inserting the tapered pole ends into the adjacent sections. Drape the rainfly over the tent (pole side down). Center the pole over the front door.



DS1214-FP-6YE (2pcs)



DS1214-FP-5BK (2pcs)




DS1214-SP-3BK (8pcs)

### STEP 4: Ready for Setup

The pole sleeves are color-coded to match the poles. Each plastic hub is pre-attached to the skin of the screen house. Insert the end of each fiberglass pole into the plastic hub with the larger diameter teeth.

 **Caution: Make sure pole sleeve fabric is evenly distributed along pole and does not catch at pole joints. Undue stress could break pole or tear fabric.**

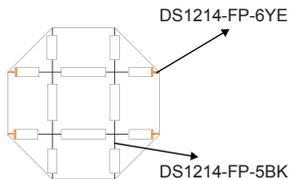


### STEP 5: Raise the Screen House

To raise the screen house, begin by working on one side of the screen house then the opposite side. Insert the steel leg pole(s) with the locking steel loop into the pre-attached corner hub. Lift the poles and place the bottom of the poles onto the pins attached to the stake loops. Repeat these steps for the other poles on the opposite side of the screen house. Clip the plastic hooks sewn to the screen house wall to the steel leg poles.

### STEP 6: Finish the setup

Secure the screen house by using the guy lines and extra stakes. Make sure to pull the screen house out evenly and tightly to ensure it will stand up straight.

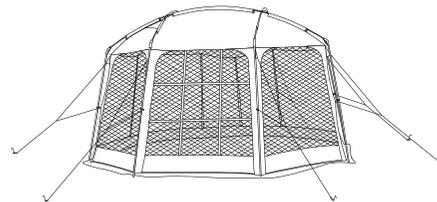

## DISASSEMBLY INSTRUCTIONS

- \* Make sure all doors are zipped nearly closed, leaving space to allow air to escape when repacking.
- \* Store all poles and stakes in their corresponding bags to prevent possible tearing or damage to fabric.

To disassemble the screen house, follow the steps above in reverse order. Be sure to leave the doors UNZIPPED. Store the stakes in the stake bag and the poles in the pole bag.

The screen house should be folded into equal parts to distribute the bulk. With the pole bag placed opposite the door, start with a tight roll, the width of your carry bag. Roll the screen house toward the door to allow the air to escape. Once rolled, secure it with the strings provided. Please the screen house and the stake bag inside the carry bag. Make sure the screen house is clean and dry prior to storage. Always store in a dry area, never on a concrete floor.