

• INTRODUCTION •

WE ADVISE YOU TO ASSEMBLE THIS PRODUCT AT LEAST ONCE AT HOME BEFORE GOING ON A TRIP. Obtaining a familiarity with the assembly and disassembly processes will help ensure your satisfaction and ease concerns you may have should you find yourself setting up in the dark and adverse weather conditions.

GET THE MOST ENJOYMENT FROM YOUR PRODUCT BY READING THIS OWNER'S MANUAL THOROUGHLY; THEN FOLLOW OUR CAMPING SUGGESTIONS OUTLINED BELOW. NOTE THE SYMBOLS WE USE AND WHY:

• Warning • Warning •

Not complying with these warnings will void your Instant Canopy warranty!


- DO NOT set-up or leave your Instant Canopy assembled in rain, hail, sleet, snow, drizzle, lightning, strong winds or any harsh weather conditions.
- Do not allow water of any kind to accumulate on the canopy top.
- Use Tie-downs, Stakes or Weight Bags to secure your Instant Canopy in windy conditions. Commercial Stake Kits and Weight Bags needs to be purchased as accessories separately.
- Always follow directions when setting-up your Instant Canopy. Be aware of hands and fingers when expanding or collapsing frame.
- It is recommended to remove canopy top from frame after take-down. Storing top on frame may result in fabric tears or other damage requiring repair or re-purchase.
- Never clean the canopy top in a washing machine - serious damage will result. If cleaning is required, while set-up on the frame, use a light detergent on a cloth and gently clean top by hand, then rinse off with a garden hose.
- Do not use detergent or hand cleaner if top has custom silk-screened graphics.
- Allow top to dry completely before storing.
- Keep your canopy off of steep slopes and inclines
- Do not use your Instant Canopy as a permanent shelter. It is designed for temporary use only!
- Never leave your Instant Canopy unattended.

• Setup • Setup •

1.) Stand the Instant Canopy frame upright in the center desired set-up location. Gently pull the outer frame legs partially extended with a second person assisting.




2.) Lift frame into position by expanding the truss bars until the frame is fully extended. Be careful not pinch fingers or hands as you lift and step backwards slowly.

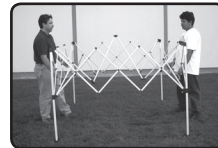

1-2

3.) Now that the frame is fully extended, lock the top bracket sliders into place at each corner by holding the frame with one hand and pulling the slider in place until it locks.

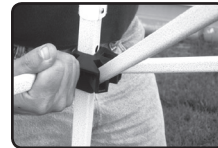


4.) Place the canopy fabric top over the entire extended canopy frame.



3-4

5.) At each corner of the canopy frame, secure the canopy fabric top adhesive (Velcro) strip (underneath the inside of the fabric) to the upper canopy frame adhesive (Velcro) strip. Then pull fabric over to secure in place.

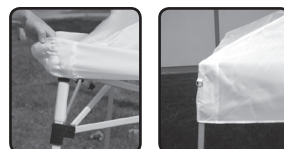

5

6.) Adjust the frame legs to your desired height by lifting up each leg and slowly pulling out the inner leg into place until the leg pops into place. Placing one foot on each corner footpad and slowly extending each leg into place can also extend the frame legs.



6-7

8 - Complete


7.) Attach adhesive strips (Velcro) to each sides and ceiling truss bars of the canopy frame to secure canopy top.



8.) Your Instant Canopy is now complete!

• Take Down • Take Down •


1.) Push each push pin height adjuster on each leg and shorten the frame to its original height prior to extending the legs during set-up.

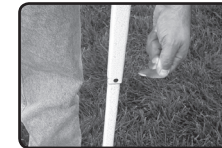

1

2.) Disengage locking button at each corner of the frame.

3.) Hold the middle frame section with a second person assisting on two sides of the frame. Walk forward slowly allowing for the frame to fold inward and close. Be careful not pinch fingers or hands as you close the frame. Secure the frame firmly for storage.

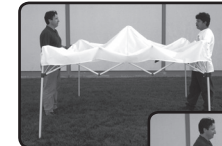

3



4.) Completely fold the frame securely with or without the canopy attached (it is recommended to remove the canopy top).



4-5

5.) Place the frame into the unzipped carry bag slowly until canopy fits comfortably. Zip the storage bag completely shut.

