

INTRODUCTION

A MESSAGE TO OUR CUSTOMERS:

WE ADVISE YOU TO ASSEMBLE THIS PRODUCT AT LEAST ONCE AT HOME BEFORE GOING ON A TRIP. Obtaining a familiarity with the assembly and disassembly processes will help ensure your satisfaction and ease concerns you may have should you find yourself setting up in the dark or adverse weather conditions.

GET THE MOST ENJOYMENT FROM YOUR PRODUCT BY READING THIS OWNER'S MANUAL THOROUGHLY; THEN FOLLOW OUR CAMPING SUGGESTIONS OUTLINED BELOW. NOTE THE SYMBOLS WE USE AND WHY:

 CALLS YOUR ATTENTION TO ANY POSSIBLE HAZARDS IN THE USE AND HANDLING OF YOUR PRODUCT.

 CALLS YOUR ATTENTION TO PROVEN SUGGESTIONS COLLECTED FROM OUR CAMPING EXPERTISE AND WILL ENHANCE YOUR EXPERIENCE!

IMPORTANT NOTICE: You may compromise the original FIRE RETARDENCY and WATER REPELLENCY protective coatings when you apply sprays or other chemical treatments to your tent.



DO NOT SPRAY!



FABRIC

THIS FABRIC IS NOT WATERPROOF!

Your product's fabric is a synthetic material that has been treated and is not only highly-resistant to the sun's Ultraviolet (UV) light but also highly water-repellant in light rain conditions. Insure a successful and enjoyable camping experience by heeding the following tips:

- Keep objects from touching the inside, as objects will "draw in" moisture at the point of contact.
- "Prep" your product where necessary with a recommended seam sealing compound – refer to the seam sealing information in DO NOT SPRAY section of this owner's manual.

Important: Prolonged exposure to sunlight that causes UV damage and/or the use of non-recommended foreign substances on synthetic material may damage the fabric properties and IS NOT COVERED BY THE LIMITED WARRANTY.



FIRE

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS PRODUCT FABRIC. THIS FABRIC IS NOT FIREPROOF! It is made with flame resistant fabric, which meets CPAI-84 specifications. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.

Do NOT ERECT NEAR an open flame. NEVER use any fuel burning, oxygen consuming devices, or any device that produces fumes – including, but not limited to: cooking stoves, lanterns, candles, hibachis, or heaters – in or around your product. Inhalation of fumes may result in carbon monoxide poisoning, injury and/or death.



CARE & STORAGE

Your product is NOT machine washable. Your product is NOT machine dryable.

One of the easiest ways to damage your product is storing it while wet. If you must close camp in the rain, follow these guidelines carefully:

- As Soon As Possible: Open your product and ensure that every area of fabric is clean and completely dry before rolling up for storage.
- If necessary, hang product outside or loosely drape over a ladder in your garage or spare room for a few days, turning it inside and out to prevent trapping pockets of water or debris.
- Use a soft brush to wipe away surface dirt.

To clean your product: Hand wash using a mild dishwashing soap and soft bristle brush, then allow the fabric to completely air dry.

Don't neglect the frame: Wipe down all parts – steel, plastic, and fiberglass – before putting away for next season's use. Salts from ocean air can and do affect damage if not dealt with as quickly as possible.

Storing a wet fabric for as little as 24 hours in warm weather is likely to cause fabric to mildew. Once mildew sets in, the stains are permanent. Stains cannot be removed without potential harm to the fabric's coatings; chemicals or cleaning agents used to remove dirt and stains may irreversibly harm the fabric.

Salts, mildew and other causes and subsequent effects are NOT covered under the limited warranty.

ASSEMBLY INSTRUCTIONS

THIS RECREATIONAL PRODUCT REQUIRES TWO ADULTS TO ASSEMBLE.

- Make sure ground surface is free from debris, i.e., rocks that could damage flooring,
- Unless otherwise specified all instructions will be given assuming the assembler is facing the front opening of the tent.
- Carefully fold out your poles, using caution to prevent snapping the shock-cording. Make sure each pole segment is "seated" into the next section before flexing the pole during set-up. Sort POLES by type and length; refer to parts list descriptions.
- Do not drop tent pole bag. Do not bounce tent bag on its end to remove tent, as these actions may damage the shock-corded and/or pole ends.

Step 1: Verify Package Contents

Verify package contents by emptying contents of bag(s) and confirming all parts are included and undamaged.

 
 **Tip: Do this at home before you leave on your trip.**

STEP 2: Install the Roof Poles


A) Select a smooth level site and spread out your screen house. Extend poles and sort into groups, i.e. roof poles, leg poles. This will simplify assembly process.

B) Take the longer roof poles (RPOL-361BK) and push them through the center pole sleeves, creating an "X". Gently flex each pole and place ends into ribbed openings of elbow connectors (EL40-151-6).

 **Note: Elbow connectors are attached to the screen house fabric.**

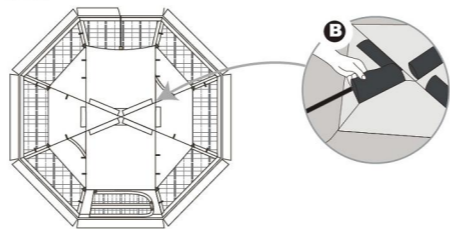

 C) Slide the remaining shorter middle roof poles (RMPL-330KH) through the khaki pole sleeves, again insert ends into ribbed openings of all remaining elbow connectors (EL40-151-6).

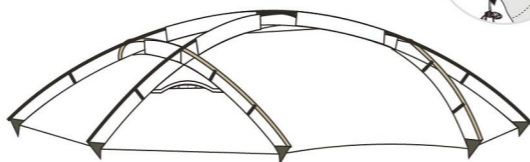

D) Snap J-hooks which are sewn on the screen house body over each roof pole to shape the screen house roof.



STEP 3: Install the Leg Poles

A) Insert a steel leg pole into the smooth end of each elbow connector and secure the other end of pole onto the pin-rings at base of screen house. Repeat for all leg poles.



 
B) Snap Quick Clips over leg poles to straighten fabric walls.

STEP 4: Stake the Screen house

A) Stake the screen house by driving stakes through the webbing loops and pin-rings at base of screen house.




B) To secure guy lines, find the guy line plastic slider and look for the portion of the line opposite the knot. Pull this portion to form a loop (works like a slip knot). Extend guy line to the ground and stake securely. Repeat for all guy lines.

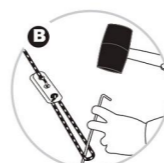

 **Tip: Stakes provided are for solid ground. Camping in sand? We suggest corkscrew style. Check favorite retailer for availability.**

STEP 5: Install the Hinged Door Poles

 Unzip the hinged door black sleeves at door edge and insert the hinged door pole set DPOL-345.6BK into the door sleeve. Zip the door sleeve. Locate the nylon fastener and sleeve at the middle of the door panel. Insert the pole DPOLE-109BK into the sleeve and attach the nylon fastener.

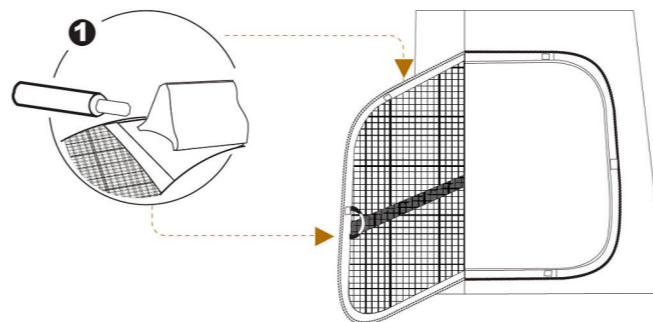


DISASSEMBLY INSTRUCTIONS

- Store all poles and stakes in their corresponding bags to prevent possible tearing or damage to fabric.

STEP 3: Remove the Stakes

Carefully remove stakes by pulling out the hook ends.

 **Tip: Do not pull or tug at the stake loops sewn onto the fabric body.** Remove excess soil from the stakes and store them in their bag.

STEP 2: Take down the Screen house

A) Detach the quick clips from the leg poles.

B) Disengage pin ring from leg pole. Repeat for remaining poles.

C) Remove leg pole from elbow connector. Repeat for each leg pole.

D) Gently flex one roof pole to release from the elbow connector, then slide completely out from pole sleeve. Repeat for other roof poles.

E) Remove Hinged Door Poles from Door sleeve.

F) Collapse all poles and store them in pole bag provided.

