

STONEY TRAIL

18ft x 10ft x 72in/5.48m x 3.04m x 1.82m

(✓) QTY	DESCRIPTION	PART NUMBER
FABRIC BODY:		
1	Tent Body	N/A
POLES:		
2	Fiberglass, shock-corded Main Tent Pole – black, 11 section	DS002-FP-11BK
2	Fiberglass, shock-corded Side Tent Pole – black/w yellow label, 10 section	DS002-FP-10YE
1	Fiberglass, shock-corded Rainfly Pole with tips – black	DS002-FPR-4BK
RAINFLY:		
1	Rainfly w/8 S-Hooks; all seams taped	DS002-RF
CARRY BAG:		
1	Carry Bag – black	DS002-CB
UNIVERSAL PARTS: (some attached to fabric)		
1	Gear Loft: 18 1/8in x 26 3/8in	DS002-GL
1	Divider Curtain: 34 SQFT	DS002-DC
1	Pole Bag	DS002-PB
1	Stake Bag	DS002-SB
4	Guy Rope: 8 1/4ft, black w/white fluorescence	DS002-GR
STAKES:		
18	Stakes: dia4mm x 7in	DS002-ST

Review your parts list above to make sure all parts listed above have been included in your package.

Please do NOT return product to store.

Call our TOLL FREE Numbers: 866-283-4412 Monday-Friday 7am - 5pm CST

Mention your complete Model Number so that our Representative may assist you!

NOTICE!

FOR MISSING PARTS:

1-866-283-4412

**PLEASE DO NOT
RETURN THIS UNIT TO
THE RETAIL STORE**

TROUBLESHOOTING GUIDE

PROBLEM	SOLUTION
1. CONDENSATION	THIS IS CAUSED BY LOWER TEMPERATURES ON OUTSIDE OF PRODUCT COMBINED WITH BODY HEAT ON INSIDE OF PRODUCT. WHEN THIS OCCURS, AVOID TOUCHING WALLS TO REDUCE CONTACT LEAKAGE. LEAVING DOORS AND WINDOWS OPEN WILL REDUCE CONDENSATION.
4. MILDEW	TO AVOID MILDEW, NEVER STORE YOUR PRODUCT WET OR DAMP. HOWEVER, IF MILDEW OCCURS, USE A SOFT BRISTLE BRUSH OR SPONGE WITH MILD SOAP TO CLEAN. LET DRY IN THE SUNLIGHT AND APPLY SEAM SEALER COMPOUND ON INSIDE SEAMS.
3. REPAIRING A TEAR	FOR SMALL TEARS USE A SELF-ADHESIVE PATCH KIT. WE RECOMMEND A REPAIR SHOP FOR LARGER TEARS.
4. FAULTY ZIPPER	ALL OF OUR TENTS COME WITH SELF-REPAIRING NYLON COIL ZIPPERS. IF THE ZIPPER SEPARATES, YOU CAN MOVE THE SLIDER TO THE BEGINNING OF THE ZIPPER TAPE AND REWORK THE ZIPPER. LOCAL AWNING AND UPHOLSTERY REPAIR SHOPS MAY BE ABLE TO ASSIST YOU.
5. FLOOR CONDENSATION <small>(ONLY APPLICABLE ON PRODUCTS WITH FLOOR)</small>	TO PREVENT FLOOR CONDENSATION USE A GROUND CLOTH. PLACING A GROUND CLOTH UNDER YOUR PRODUCT WILL PROLONG ITS LIFE. GROUND CLOTH SIZE SHOULD BE SLIGHTLY SMALLER THAN PRODUCT FLOOR SIZE.

⚠ WARNING

THIS RECREATIONAL ITEM IS NOT INTENDED FOR USE AS A PERMANENT STRUCTURE. This Tent/Shelter has been developed and is intended to provide protection from sun and light rain. DO NOT use any gas or flame sources under or near this product. This product is NOT WATERPROOF.

Excess water build-up can cause the frame system to become unstable, and collapse, causing injury. Any personal accessories or modifications to product should be removed before the onset of inclement weather such as heavy rain, wind, lightning, hail, snow, etc. This product should be completely dismantled to avoid permanent damage to product components and avoid any possibility of personal injury. This product is not a toy. This product is not designed for use by children without adult supervision. Under no circumstances should this product be used as a permanent or temporary storage facility for children's toys, garden tools, personal belongings or similar valuables.

Captiva Designs

STONEY TRAIL



INTRODUCTION

A MESSAGE TO OUR CUSTOMERS:

WE ADVISE YOU TO ASSEMBLE THIS PRODUCT AT LEAST ONCE AT HOME BEFORE GOING ON A TRIP. Obtaining a familiarity with the assembly and disassembly processes will help ensure your satisfaction and ease concerns you may have should you find yourself setting up in the dark or adverse weather conditions.

GET THE MOST ENJOYMENT FROM YOUR PRODUCT BY READING THIS OWNER'S MANUAL THOROUGHLY. THEN FOLLOW OUR CAMPING SUGGESTIONS OUTLINED BELOW. NOTE THE SYMBOLS WE USE AND WHY:

 CALLS YOUR ATTENTION TO ANY POSSIBLE HAZARDS IN THE USE AND HANDLING OF YOUR PRODUCT.

 CALLS YOUR ATTENTION TO PROVEN SUGGESTIONS COLLECTED FROM OUR CAMPING EXPERTISE AND WILL ENHANCE YOUR EXPERIENCE!

IMPORTANT NOTICE: You may compromise the original FIRE RETARDENCY and WATER REPELLENCY protective coatings when you apply sprays or other chemical treatments to your tent.



DO NOT SPRAY!



FABRIC

THIS FABRIC IS NOT WATERPROOF!

Your product's fabric is a synthetic material that has been treated and is not only highly-resistant to the sun's Ultraviolet (UV) light but also highly water-repellant in light rain conditions. Insure a successful and enjoyable camping experience by heeding the following tips:

- Keep objects from touching the inside, as objects will "draw in" moisture at the point of contact.
- "Prep" your product where necessary with a recommended seam sealing compound – refer to the seam sealing information in DO NOT SPRAY section of this owner's manual.

Important: Prolonged exposure to sunlight that causes UV damage and/or the use of non-recommended foreign substances on synthetic material may damage the fabric properties and IS NOT COVERED BY THE LIMITED WARRANTY.



STRUCTURE

OUR RECREATIONAL PRODUCTS ARE CONSTRUCTED USING CUSTOM SPECIFICATIONS. However, they are not engineered for extreme weather, climates or environments. Modification, abuse, and incident or "surprise" weather conditions may make additional precautions necessary. Here are some tips should you find yourself preparing for adverse conditions:

 Make sure any guy lines/ropes on your structure are well-secured in the ground and lines/ropes are sufficiently "taught" between structure and stake; adjust where needed. Facing periods of heavy winds? Secure tent loops and guy lines/ropes with extra stakes if necessary.

 Check the corners of the roof fabric and make sure roofline is properly positioned on framing. Use ALL provided methods of securing your fabric to its framing: nylon fastener strips, ties, and guy lines/ropes where located. Storms or steady rains may collect in water pockets on the roofline. Water adds weight, and weight weakens the overall structure. Avoid possible collapse by maintaining a watchful eye and removing any water accumulation that may occur.



FIRE

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS PRODUCT FABRIC. THIS FABRIC IS NOT FIREPROOF! It is made with flame-resistant fabric, which meets CPW-84 specifications. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.

Do NOT ERECT NEAR an open flame. NEVER use any fuel burning, oxygen consuming devices, or any device that produces fumes – including, but not limited to: cooking stoves, lanterns, candles, hibachis, or heaters – in or around your product. Inhalation of fumes may result in carbon monoxide poisoning, injury and/or death.



CARE & STORAGE

Your product is NOT machine washable. Your product is NOT machine dryable.

One of the easiest ways to damage your product is storing it while wet. If you must close camp in the rain, follow these guidelines carefully:

- As Soon As Possible: Open your product and ensure that every area of fabric is clean and completely dry before rolling up for storage.
- If necessary, hang product outside or loosely drape over a ladder in your garage or spare room for a few days, turning it inside and out to prevent trapping pockets of water or debris.
- Use a soft brush to wipe away surface dirt.

To clean your product: Hand wash using a mild dishwashing soap and soft bristle brush, then allow the fabric to completely air dry.

Don't neglect the frame: Wipe down all parts – steel, plastic, and fiberglass – before putting away for next season's use. Salts from ocean air can and do affect damage if not dealt with as quickly as possible.

Storing a wet fabric for as little as 24 hours in warm weather is likely to cause fabric to mildew. Once mildew sets in, the stains are permanent. Stains cannot be removed without potential harm to the fabric's coatings; chemicals or cleaning agents used to remove dirt and stains may irreversibly harm the fabric.

Salts, mildew and other causes and subsequent effects are NOT covered under the limited warranty.

ASSEMBLY INSTRUCTIONS

THIS RECREATIONAL PRODUCT REQUIRES ADULT SUPERVISION FOR ASSEMBLY.


- Make sure ground surface is free from debris, i.e., rocks that could damage flooring.
- Unless otherwise specified all instructions will be given assuming the assembler is facing the front opening of the tent.
- Carefully fold out your poles, using caution to prevent snagging the shock-cording. Make sure each pole segment is "seated" into the next section before flexing the pole during set-up. Sort POLES by type and length; refer to parts list descriptions.
- Do not drop tent pole bag. Do not bounce tent bag on its end to remove tent, as these actions may damage the shock-corded and/or pole ends.

STEP 1: Verify Package Contents

Verify package contents by emptying contents of bag(s) and confirming all parts are included and undamaged.  **Tip: Do this at home before you leave on your trip.**

STEP 2: Set Up the Poles

A) Select a smooth level site and spread out your tent.
B) Extend poles and place in position ready for installation. Take the main tent pole (DS002-FP-11BK) and push it through blue sleeves located at top of the tent. Repeat process for remaining tent pole. Poles will cross each other at the center.

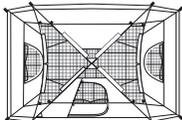

C) Slide the side tent pole (DS002-FP-10YE) and push it through the yellow-labeled sleeves located at side of the tent. Repeat process for remaining tent pole.

D) After sliding poles through sleeves, gently flex poles into an arch and insert ends onto Pin-rings at the base of the tent.

 **Caution: Make sure pole sleeve fabric is evenly distributed along pole and does not catch at pole joints. Undue stress could break pole or tear fabric.**



E) Snap the J-hooks (attached to fabric body) over each tent pole to shape the tent.



STEP 3: Attach the Rainfly

A) Slide rainfly pole (DS002-FPR-4BK) through sleeve located on underside of the rainfly.

 **Tip: Sleeve is located near edge of fabric by main door.**

B) Drape the rainfly over the tent (pole side down). Center the pole over the front door.
C) Insert tips of rainfly pole into metal grommets located on pole sleeves.



D) Connect S-Hooks on rainfly to pin-rings at base of tent.

E) Secure the rainfly to the tent by wrapping nylon fasteners (located on underside of fly) around each pole.

STEP 4: Attach the Gear Loft and Divider Curtain

To install the gear loft, simply attach its S-Hooks to the fabric loops around the inside tent ceiling.

 **TIP: Gear loft is for storing light weight items only.**

To install the divider curtain, attach its S-Hooks to the fabric loop in the middle of the tent.

STEP 5: Stake the Tent

A) Stake tent by driving stake through the webbing loops on base of tent.
B) To secure guy ropes, find the guy rope plastic slider and look for the portion of the rope opposite the knot. Pull this portion, forming a loop (works like a slip knot). Extend guy rope to ground and stake. Repeat with remaining guy ropes.

 **Tips: Stakes provided are for solid ground. Camping in sand? We suggest corkscrew style. Check favorite retailer for availability.**



DISASSEMBLY INSTRUCTIONS

- * Make sure all doors are zipped nearly closed, leaving space to allow air to escape when repacking.
- * Store all poles and stakes in their corresponding bags to prevent possible tearing or damage to fabric.

STEP 1: Remove Rainfly

A) Detach S-Hooks that hold down rainfly.
B) Disengage rainfly pole from metal grommets and push pole out of pole sleeve.
C) Carefully fold the rainfly and pole for storage.

STEP 2: Remove the Gear Loft and Divider Curtain

Detach gear loft and divider curtain by unhooking their S-Hooks from fabric loops. Fold for storage.

STEP 3: Remove the Stakes

Carefully remove stakes by pulling out the hook ends.

 **Tip: Do not pull or tug at the stake loops sewn onto the fabric body.**

Remove excess soil from the stakes and store them in their bag.



STEP 4: Take Down the Tent

A) Detach the J-Hooks from the poles.
B) Remove poles from pin-rings.
C) Slide each pole out by carefully pushing it away from the pole sleeve.

 **Tip: By following these instructions, you will minimize risk of damaging poles and/or snapping shock-cording.**

D) Carefully fold poles and store them in their bags.

STEP 5: Fold the Tent

Fold tent into a rectangular shape the same width as pole bag. Lay pole bag at one end of fabric and roll tightly together, slowly squeezing air out as you go. (Following these instructions will make it easier to fit tent into bag.) Store tent in carry bag provided.

