

MODEL# 100257972 FAMILY DOME TENT 17ft x 9ft x 80in/5.18m x 2.74m x 2.03m

✓ QTY. DESCRIPTION			PARTNUMBER
		FABRIC DODY	
	1	Tent Body	N/A
		POLES	
	4	Fiberglass, shock-corded Tent Roof Pole, black	RPOL-194BK
	4	Steel, chain-corded Side Corner Leg Pole -black	LPSA-162BK
	4	Steel, chain-corded Center Leg Pole -black	LPCA-177BK
	2	Fiberglass, shock-corded Rainfly Pole w/tips-black Rainfly	FPOL-171BK
	1	Rainfly w/8 S-hooks; all seam taped-brown/grey/w navy trim	RFLY-BRGYNV12
		CARRY BAG	
	1	Carry bag, grey	CBAG-770GY
		UNIVERSAL PARTS:(some attached to fabric)	
	8	Elbow Connector Hub 155 degree	EL55-161-2
	1	Pole Bag	PBAG-32IN
	1	Stake Bag	SBAG-12IN
	2	Guy Rope; 2.5M	GROPE-2.5M
	6	Guy Ropen; 3.0M	GROPE-3M
		STAKES	
	1	Stake Set of Twenty-three 7.5 in. steel stakes	SSET-23ST7.5IN

Review your parts list above to make sure all parts listed above have been included in your package.

Please do NOT return product to store.

Call our TOLL FREE Numbers: 866-283-4412 Monday-Friday 7am - 5pm CST Mention your complete Model Number so that our Representative may assist you!

NOTICE!

FOR MISSING PARTS: 1-866-283-4412

PLEASE DO NOT RETURN THIS UNIT TO THE RETAIL STORE

TROUBLESHOOTING GUIDE				
PROBLEM	SOLUTION			
1. CONDENSATION	THIS IS CAUSED BY LOWER TEMPERATURES ON OUTSIDE OF PRODUCT COMBINED WITH BODY HEAT ON INSIDE OF PRODUCT. WHEN THIS OCCURS, AVOID TOUCHING WALLS TO REDUCE CONTACT LEAKAGE. LEAVING DOORS AND WINDOWS OPEN WILL REDUCE CONDENSATION.			
4. MILDEW	TO AVOID MILDEW, NEVER STORE YOUR PRODUCT WET OR DAMP. HOWEVER, IF MILDEW OCCURS, USE A SOFT BRISTLE BRUSH OR SPONGE WITH MILD SOAP TO CLEAN. LET DRY IN THE SUNLIGHT AND APPLY SEAM SEALER COMPOUND ON INSIDE SEAMS.			
3. REPAIRING A TEAR	FOR SMALL TEARS USE A SELF-ADHESIVE PATCH KIT. WE RECOMMEND A REPAIR SHOP FOR LARGER TEARS.			
4. FAULTY ZIPPER	ALL OF OUR TENTS COME WITH SELF-REPAIRING NYLON COIL ZIPPERS. IF THE ZIPPER SEPARATES, YOU CAN MOVE THE SLIDER TO THE BEGINNING OF THE ZIPPER TAPE AND REWORK THE ZIPPER. LOCAL AWNING AND UPHOLSTERY REPAIR SHOPS MAY BE ABLE TO ASSIST YOU.			
5. FLOOR CONDENSATION (ONLY APPLICABLE ON PRODUCTS WITH FLOOR)	TO PREVENT FLOOR CONDENSATION USE A GROUND CLOTH. PLACING A GROUND CLOTH UNDER YOUR PRODUCT WILL PROLONG ITS LIFE. GROUND CLOTH SIZE SHOULD BE SLIGHTLY SMALLER THAN PRODUCT FLOOR SIZE.			

A WARNING

THIS RECREATIONAL ITEM IS NOT INTENDED FOR USE AS A PERMANENT STRUCTURE.

This Tent/Shelter has been developed and is intended to provide protection from sun and light rain. DO NOT use any gas or flame sources under or near this product. This product is NOT WATERPROOF.

Excess water build-up can cause the frame system to become unstable, and collapse, causing injury. Any personal accessories or modifications to product should be removed before the onset of inclement weather such as heavy rain, wind, lightning, hail, snow, etc. This product should be completely dismantled to avoid permanent damage to product components and avoid any possibility of personal injury. This product is not a toy. This product is not designed for use by children without adult supervision. Under no circumstances should this product be used as a permanent or temporary storage facility for children's toys, garden tools, personal belongings or similar valuables.

OWNER'S MANUAL

Model # 100257972



