MODEL # 100488460 Big Timber II Dome Tent With Sun Porch
19ft x 17ft x 83in/5.79m x 5.18m x 2.11m

✔	QTY.	DESCRIPTION
		FABRIC BODY:
____	1	Dome Tent
		POLES:
____	2	Fiberglass, shock-corded Tent Pole - longest, black
____	3	Fiberglass, shock-corded Tent Pole - shorter, black
____	1	Fiberglass, shock-corded Tent Pole - shortest, black
____	2	Steel, shock-corded leg Tent Pole - black
		RAINFLY:
____	1	Rainfly w/ 8 S hooks; all seams taped - green w black trim
		CARRY BAG:
____	1	Carry Bag - black
		UNIVERSAL PARTS: **(Some attached to Fabric)**
____	1	Pole Bag
____	1	Stake Bag
____	6	Guy Ropes: 2.7M
		STAKES:
____	1	Stake Set of Twenty 7 inch steel stakes

Review your parts list above to make sure all parts listed above have been included in your package.

Please do NOT return product to store.

Call our TOLL FREE Numbers: 866-283-4412 Monday-Friday 7am - 5pm CST

Mention your complete Model Number so that our Representative may assist you !

NOTICE!

FOR MISSING PARTS:

1-866-283-4412

PLEASE DO NOT RETURN THIS UNIT TO THE RETAIL STORE

TROUBLESHOOTING GUIDE

PROBLEM	SOLUTION
1. CONDENSATION	THIS IS CAUSED BY LOWER TEMPERATURES ON OUTSIDE OF PRODUCT COMBINED WITH BODY HEAT ON INSIDE OF PRODUCT. WHEN THIS OCCURS, AVOID TOUCHING WALLS TO REDUCE CONTACT LEAKAGE. LEAVING DOORS AND WINDOWS OPEN WILL REDUCE CONDENSATION.
2. MILDEW	TO AVOID MILDEW, NEVER STORE YOUR PRODUCT WET OR DAMP. HOWEVER, IF MILDEW OCCURS, USE A SOFT BRISTLE BRUSH OR SPONGE WITH MILD SOAP TO CLEAN. LET DRY IN THE SUNLIGHT AND APPLY SEAM SEALER COMPOUND ON INSIDE SEAMS.
3. REPAIRING A TEAR	FOR SMALL TEARS USE A SELF-ADHESIVE PATCH KIT. WE RECOMMEND A REPAIR SHOP FOR LARGER TEARS.
4. FAULTY ZIPPER	ALL OF OUR TENTS COME WITH SELF-REPAIRING NYLON COIL ZIPPERS. IF THE ZIPPER SEPARATES, YOU CAN MOVE THE SLIDER TO THE BEGINNING OF THE ZIPPER TAPE AND REWORK THE ZIPPER. LOCAL AWNING AND UPHOLSTERY REPAIR SHOPS MAY BE ABLE TO ASSIST YOU.
5. FLOOR CONDENSATION (ONLY APPLICABLE ON PRODUCTS WITH FLOOR)	TO PREVENT FLOOR CONDENSATION USE A GROUND CLOTH. PLACING A GROUND CLOTH UNDER YOUR PRODUCT WILL PROLONG ITS LIFE. GROUND CLOTH SIZE SHOULD BE SLIGHTLY SMALLER THAN PRODUCT FLOOR SIZE.

⚠ WARNING

THIS RECREATIONAL ITEM IS NOT INTENDED FOR USE AS A PERMANENT STRUCTURE.
This Tent/Shelter has been developed and is intended to provide protection from sun and light rain. DO NOT use any gas or flame sources under or near this product. This product is NOT WATERPROOF.

Excess water build-up can cause the frame system to become unstable, and collapse, causing injury. Any personal accessories or modifications to product should be removed before the onset of inclement weather such as heavy rain, wind, lightning, hail, snow, etc. This product should be completely dismantled to avoid permanent damage to product components and avoid any possibility of personal injury. This product is not a toy. This product is not designed for use by children without adult supervision. Under no circumstances should this product be used as a permanent or temporary storage facility for children's toys, garden tools, personal belongings or similar valuables.

OWNER'S MANUAL

Model # 100488460

INTRODUCTION

A MESSAGE TO OUR CUSTOMERS:
WE ADVISE YOU TO ASSEMBLE THIS PRODUCT AT LEAST ONCE AT HOME BEFORE GOING ON A TRIP. Obtaining a familiarity with the assembly and disassembly processes will help ensure your satisfaction and ease concerns you may have should you find yourself setting up in the dark or adverse weather conditions.

GET THE MOST ENJOYMENT FROM YOUR PRODUCT BY READING THIS OWNER'S MANUAL THOROUGHLY; THEN FOLLOW OUR CAMPING SUGGESTIONS OUTLINED BELOW. NOTE THE SYMBOLS WE USE AND WHY:

⚠ CALLS YOUR ATTENTION TO ANY POSSIBLE HAZARDS IN THE USE AND HANDLING OF YOUR PRODUCT.

☞ CALLS YOUR ATTENTION TO PROVEN SUGGESTIONS COLLECTED FROM OUR CAMPING EXPERTISE AND WILL ENHANCE YOUR EXPERIENCE!

IMPORTANT NOTICE: You may compromise the original FIRE RETARDENCY and WATER REPELLENCY protective coatings when you apply sprays or other chemical treatments to your tent.

DO NOT SPRAY!

FABRIC

THIS FABRIC IS NOT WATERPROOF!
Your product's fabric is a synthetic material that has been treated and is not only highly-resistant to the sun's Ultraviolet (UV) light but also highly water-repellant in light rain conditions. Insure a successful and enjoyable camping experience by heeding the following tips:

- Keep objects from touching the inside, as objects will "draw in" moisture at the point of contact.
- "Prep" your product where necessary with a recommended seam sealing compound – refer to the seam sealing information in DO NOT SPRAY section of this owner's manual.

Important: Prolonged exposure to sunlight that causes UV damage and/or the use of non-recommended foreign substances on synthetic material may damage the fabric properties and IS NOT COVERED BY THE LIMITED WARRANTY.

STRUCTURE

OUR RECREATIONAL PRODUCTS ARE CONSTRUCTED USING CUSTOM SPECIFICATIONS. However, they are not engineered for extreme weather, climates or environments. Modification, abuse, and inclement or "surprise" weather conditions may make additional precautions necessary. Here are some tips should you find yourself preparing for adverse conditions:

☞ Make sure any guy lines/ropes on your structure are well-secured in the ground and lines/ropes are sufficiently "taught" between structure and stake; adjust where needed. Facing periods of heavy winds? Secure tent loops and guy lines/ropes with extra stakes if necessary.

☞ Check the corners of the roof fabric and make sure roofline is properly positioned on framing. Use ALL provided methods of securing your fabric to its framing: nylon fastener strips, ties, and guy lines/ropes where located. Storms or steady rains may collect in water pockets on the roofline. Water adds weight, and weight weakens the overall structure. Avoid possible collapse by maintaining a watchful eye and removing any water accumulation that may occur.

FIRE

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS PRODUCT FABRIC. THIS FABRIC IS NOT FIREPROOF! It is made with flame resistant fabric, which meets CPAI-84 specifications. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.

Do NOT ERECT NEAR an open flame. NEVER use any fuel burning, oxygen consuming devices, or any device that produces fumes – including, but not limited to: cooking stoves, lanterns, candles, hibachis, or heaters – in or around your product. Inhalation of fumes may result in carbon monoxide poisoning, injury and/or death.

CARE & STORAGE

Your product is NOT machine washable. Your product is NOT machine dryable.

One of the easiest ways to damage your product is storing it while wet.
If you must close camp in the rain, follow these guidelines carefully:

- As Soon As Possible: Open your product and ensure that every area of fabric is clean and completely dry before rolling up for storage.
- If necessary, hang product outside or loosely drape over a ladder in your garage or spare room for a few days, turning it inside and out to prevent trapping pockets of water or debris.
- Use a soft brush to wipe away surface dirt.

To clean your product: Hand wash using a mild dishwashing soap and soft bristle brush, then allow the fabric to completely air dry.

Don't neglect the frame: Wipe down all parts – steel, plastic, and fiberglass - before putting away for next season's use. Salts from ocean air can and do affect damage if not dealt with as quickly as possible.

Storing a wet fabric for as little as 24 hours in warm weather is likely to cause fabric to mildew. Once mildew sets in, the stains are permanent. Stains cannot be removed without potential harm to the fabric's coatings; chemicals or cleaning agents used to remove dirt and stains may irreversibly harm the fabric.

Salts, mildew and other causes and subsequent effects are NOT covered under the limited warranty.

ASSEMBLY INSTRUCTIONS

THIS RECREATIONAL PRODUCT REQUIRES TWO ADULTS TO ASSEMBLE.

- Make sure ground surface is free from debris, i.e., rocks that could damage flooring,
- Unless otherwise specified all instructions will be given assuming the assembler is facing the front opening of the tent.
- Carefully fold out your poles, using caution to prevent snapping the shock-cording. Make sure each pole segment is "seated" into the next section before flexing the pole during set-up. Sort POLES by type and length; refer to parts list descriptions.
- Do not drop tent pole bag. Do not bounce tent bag on its end to remove tent, as these actions may damage the shock-corded and/or pole ends.

Step 1:Spread the tent out flat, floor side down. Assemble the three shorter fiberglass poles and insert into the sleeves on the top of the tent. (pic 1,3) Insert poles top into the star shaped hub on the top of tent. (pic 2)

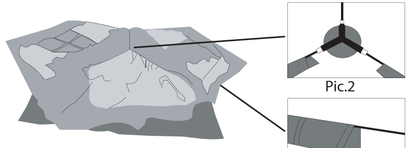

Pic.1

Pic.2



Pic.3

Step 2:Insert poles ends into the corresponding pin rings. (pic 4,5)

Pic.4



Pic.5



Pic.6

Step 3:Assemble the two longest fiberglass poles and insert into the two side sleeves. Insert poles ends into the corresponding pin rings. (pic 7,8) Clip the plastic hooks sewn to the tent to the fiberglass poles. (pic 6)
Step 4:Fix stakes into the rings on the corners of the tent to secure it to the ground. (pic 7,8,9)

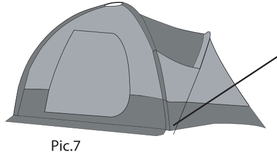

Pic.7



Pic.8



Pic.9

Step 5:Assemble the shortest fiberglass pole and insert through the front sleeve. (pic 10) Insert poles ends into the corresponding pin rings. (pic 11,12)

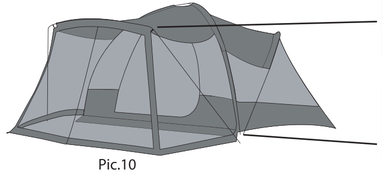

Pic.10



Pic.11



Pic.12

Step 6:Secure the PE sheet by hooking the plastic S hooks on the PE sheet corners to the corresponding rings at the tent corners. (pic 13)
Step 7:Fix stakes into the rings on the corners of the tent fo secure the tent to the ground. (pic 14,15,16)

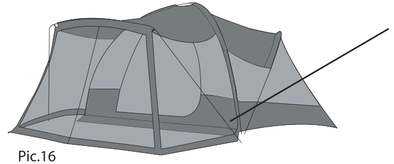

Pic.16



Pic.13



Pic.14



Pic.15

Step 8:Place the fly over the tent. Attach the fly to the tent by hooking the plastic S hook on the fly to the corresponding rings at the tent corners. (pic 17,18,19)
Step 9:Wrap the Velcro fasteners of the fly around the fiberglass tent poles. (pic 20)

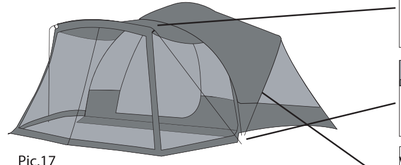

Pic.17



Pic.18



Pic.19

Pic.20

Step 10:Finally secure the tent in place with the guy ropes and extra tent stakes. (pic 21,22,23)
Step 11:Tent assembled. (pic 24)

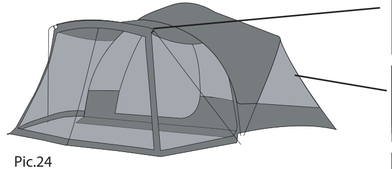

Pic.24



Pic.21



Pic.22



Pic.23

NOTE: To take down the tent, follow the steps above in the reverse order. Be sure to leave doors and windows unzipped. Place stakes into stake bag and poles into pole bag, which are provided.

The tent should be folded into equal parts toward the center of the tent to distribute the bulk. Fold fly and lay on top of the tent. Start a small tight roll, the width of your carry bag. With the pole bag placed at the opposite the door. Roll tent toward door to allow air to escape. Once rolled, secure with strings or roper. Slide tent and stake bag into carry bag. Make sure the tent is clean and dry before storing. Store in a day area, off of concrete floor.